


206 Ossipee Trail
P.O. Box 533
Limington, Me. 04049

800 237 6902
207 637 2331
Fax 207 637 2329
aerox@aerox.com
www.aerox.com

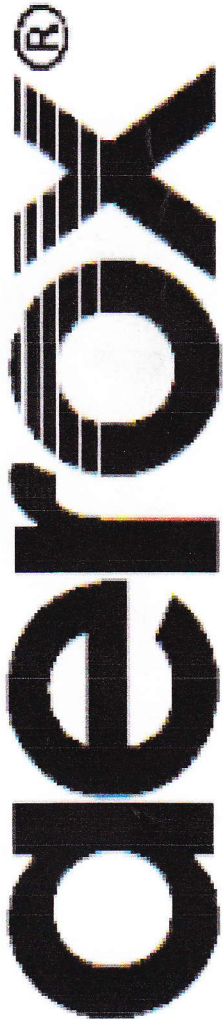

4110-160 OXYGEN CONSERVER INSTRUCTIONS

PRINCIPLES OF OPERATION

The aerox® Oxygen Conserver, Part Number 4110-160 is intended to be used as an oxygen saving device. The device is triggered through the users respiratory inspiration, negative pressure when the user inhales will cause the Conserver to supply a pulse of oxygen at the beginning of each breath there-by reducing the demand on the users standard supplemental oxygen system. In the "EMERGENCY" position the Conserver will provide a continuous flow of 2 to 2 ½ liters of Oxygen per minute.

OUTLET SPECIFICATION

Cylinder Pressure Range: 300 - 2200 PSI (21 - 151 Bar)
Outlet Pulse Settings:
1st Position (OFF)
2nd Position (10,000 Feet) - 1.0 LPM Equivalent.
3rd Position (12,500 Feet) - 1.25 LPM Equivalent.
4th Position (15,000 Feet) - 1.5 LPM Equivalent.
5th Position (18,000 Feet) - 1.8 LPM Equivalent.
6th Position (EMERGENCY) - 2.0 - 2.5 LPM Continuous Flow.

OPERATING INSTRUCTIONS

- 1) Place the aerox® black lanyard with the attached Oxygen Conserver over your head and around your neck.
- 2) Turn the black knurled knob of the Oxygen Conserver to the "OFF" position. "OFF" will be visible in the Conserver window.
- 3) Place the Cannula/Hose P/N: 4110-700 (as if putting on a pair of glasses) over your ears and under your chin. The Cannula body should rest on your upper lip and the two flared nasal tips should extend well into each nostril.
NOTICE: No Other Cannula Is Effective With This Conserving Device.
- 1) Slide the plastic bushing up toward your chin to hold the cannula securely and comfortably against your face.
- 2) Push the cannula hose bushing onto the "Outlet" (Lower) barb of the Oxygen Conserver.
- 3) With the Oxygen Conserver "Inlet" Line attached to the (Upper) barb of the conserver attach the quick connect end of the Conserver hose to your oxygen system.
- 4) Turn on Oxygen System as follows; For 500 Series Portable Oxygen Systems, turn regulator knob to on. For 400 Series Portable Oxygen Systems, slowly open the 540 Valve.
- 5) Set the Oxygen Conserver to the desired altitude. (10K - 18K Feet.)
- 6) Relax...breathe comfortably. Concentrate on breathing through your nose!
- 7) A Flow Indicator is installed inline and the red indicator will respond for each breath as oxygen is released from the Conserver.

STOWAGE

- 1) When finished turn the oxygen supply regulator or valve to "OFF".
- 2) Turn the Conserver Selection Knob to the "EMERGENCY" position and wait for all O2 in the Conserver to purge.
- 3) Turn the Conserver Selector to the "OFF" Position.
- 4) Always clean the nasal prongs of the Cannula after each use.
- 5) Store System in a clean, dry Zip Lock bag.